

# Quick Start Wizard

Quick Start Wizard

**AUTOPLATE** **TEMPLATE**

**Plate Dimensions**

Width:  mm

Height:  mm

**Number of Lines**

**New or Existing Lines?**

Are these changes to apply to the existing lines in your layout or to be added as new additional lines?

☐ Create Layout

☐ Add these lines to existing layout

**Apply Changes?**

**Line Details**

Text Occupies:  %

Margin Percent:  %

Top Margin:  mm

Bottom Margin:  mm

Left Margin:  mm

Right Margin:  mm

Line	Ratios	Line Ht	Locked
1	1.00	14.68	<input type="checkbox"/>
2	1.00	14.68	<input type="checkbox"/>
3	1.00	14.68	<input type="checkbox"/>

☒ Show this dialog again when starting a new job?

Auto-Plate can be accessed at any time by pressing F5 on your keyboard or by accessing it from the Plate Menu

d" window will open as a standard feature when Symmetry is started, or when you choose the **"New Job"** menu option. It allows you to set up the basics of your job, e.g. configure the plate dimensions and the default number of lines on the plate, or alternatively to go through the 'Template' tab to reveal various predefined templates to use.

The Quick Start window contains two tabs: **Autoplate (1)** and **Template (2)** (see image below).

- The **Autoplate** tab will be the first one to appear.
- The **Template** tab is only accessible through the **Quick Start Wizard** window, by clicking on the tab title.

When over time, you feel confident enough to create new jobs and layouts without using any of these two features and you prefer to start new jobs from a blank sheet, you can turn the **Quick Start Wizard** off by unchecking the checkbox at the bottom of the **Quick Start Wizard** screen.

Quick Start Wizard

AUTOPLATE

TEMPLATE

Plate Dimensions

Width:  mm

Height:  mm

Number of Lines

New or Existing Lines?

Are these changes to apply to the existing lines in your layout or to be added as new additional lines?

☒ Create Layout

☐ Add these lines to existing layout

Apply Changes?

Line Details

Text Occupies:  %

Margin Percent:  %

Top Margin:  mm

Bottom Margin:  mm

Left Margin:  mm

Right Margin:  mm

Line	Ratios	Line Ht	Locked
1	1.00	14.68	<input type="checkbox"/>
2	1.00	14.68	<input type="checkbox"/>
3	1.00	14.68	<input type="checkbox"/>

☒ Show this dialog again when starting a new job?

Auto-Plate can be accessed at any time by pressing F5 on your keyboard or by accessing it from the Plate Menu

From:  
<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:  
[https://manuals.cyborg-engravers.com/doku.php?id=de:symmetry:quick\\_start\\_wizard](https://manuals.cyborg-engravers.com/doku.php?id=de:symmetry:quick_start_wizard)

Last update: **2023/06/16 09:42**

