

Move spindle down



Press and hold the Z-AXIS JOG ARROW  to lower the spindle.

Use the jog speed bar to change the speed



. Click on the rabbit or on the turtle, or click on the dial.

Return to [the keypad overview](#).
Continue to [the table of contents](#).

From:
<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:
https://manuals.cyborg-engravers.com/doku.php?id=de:x300:lower_spindle_key

Last update: **2023/06/16 09:42**

