

# The Cyborg pendent only shows one tab in the preferences. How do I bring up the other two?

---

- \* In the Cyborg Pendent window right click on the “?” in the upper right corner of the window.
- \* Hold the “Ctrl” and the “Shift” keys of your computer keyboard simultaneously and left click on the option “Preferences”.
- \* You now have access to the 3 pages in the Preferences window.

From:  
<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:  
[https://manuals.cyborg-engravers.com/doku.php?id=en:faq-troubleshooting:pendent\\_settings\\_one\\_tab\\_only](https://manuals.cyborg-engravers.com/doku.php?id=en:faq-troubleshooting:pendent_settings_one_tab_only)

Last update: **2025/04/29 11:15**

