

# The Cyborg pendent only shows one tab in the preferences. How do I bring up the other two?

If the hidden tabs of the settings pendant need to be made visible, the CYBORG\_PREF should be changed to value 2.

To add this value to the Windows registry, follow these steps. **Windows 10 and Windows 11:**

- Right click on the start button.
- Click on 'System' \* **Windows 10:** Click on 'advanced settings' on the right side of the screen \* **Windows 11:** Click on 'advanced settings' in the middle of the screen
- Windows 10 and Windows 11: \* Click on 'environment variables' \* Click on 'New' \* In the window at the top, enter 'CYBORG\_PREF' \* In the window below, enter '2' - Windows 10 and Windows 11: Click on 'OK'

	Windows 10	Windows 11
1.	Rechts klikken op de starttoets.	
2.	Klikken op 'Systeem'	
3.	Klikken op 'Geavanceerde instellingen' aan de rechterkant van het scherm.	Klikken op 'Geavanceerde instellingen' in het midden van het scherm.
4.	Klikken op 'omgevingsvariabelen'	
5.	Klikken op 'Nieuw'	
6.	In het venster bovenaan 'CYBORG_PREF' ingeven	
7.	In het venster daaronder '2' ingeven.	
8.	Klikken op 'OK'.	

From: <https://manuals.cyborg-engravers.com/> - cyborg-engravers

Permanent link: [https://manuals.cyborg-engravers.com/doku.php?id=en:faq-troubleshooting:pendent\\_settings\\_one\\_tab\\_only&rev=1745839657](https://manuals.cyborg-engravers.com/doku.php?id=en:faq-troubleshooting:pendent_settings_one_tab_only&rev=1745839657)

Last update: 2025/04/28 13:27

