

The Cyborg pendent only shows one tab in the preferences. How do I bring up the other two?

From:
<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:
https://manuals.cyborg-engravers.com/doku.php?id=en:faq-troubleshooting:pendent_settings_one_tab_only&rev=1745839710

Last update: **2025/04/28 13:28**

