

The Cyborg pendent only shows one tab in the preferences. How do I bring up the other two?

* In the Cyborg Pendent window right click on the “?” in the upper right corner of the window. * Hold the “Ctrl” and the “Shift” keys of your computer keyboard simultaneously and left click on the option “Preferences”. * You now have access to the 3 pages in the Preferences window.

From:
<https://manuals.cyborg-engravers.com/> - cyborg-engravers

Permanent link:
https://manuals.cyborg-engravers.com/doku.php?id=en:faq-troubleshooting:pendent_settings_one_tab_only&rev=1745918085

Last update: **2025/04/29 11:14**

