






Diagonal jogging keys



	Jog to the left (X-) and to the back (Y+) Press the  key to jog the spindle to the left and to the rear simultaneously. The jog speed is determined by the jog speed bar setting.
	Jog to the right (X+) and to the back (Y+) Press the key to jog the spindle to the right and to the rear simultaneously. The jog speed is influenced by the jog speed bar setting.
	Jog to the left (X-) and to the front (Y-) Press the key to jog the spindle to the left and to the front simultaneously. The jog speed is determined by the jog speed bar setting.
	Jog to the right (X+) and to the front (Y-) Press the key to jog the spindle to the right and to the front simultaneously. The jog speed is influenced by the hot key setting.

From:

<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:

https://manuals.cyborg-engravers.com/doku.php?id=en:x300:jog_xy_keys&rev=1664136123

Last update: **2022/09/25 22:02**

