









# Diagonal jogging keys

	<b>Jog to the left (X-) and to the back (Y+)</b> Press the  key to jog the spindle to the left and to the rear simultaneously. The jog speed is determined jog speed bar setting.
	<b>Jog to the right (X+) and to the back (Y+)</b> Press the  key to jog the spindle to the right and to the rear simultaneously. The jog speed is influenced by the jog speed bar setting.
	<b>Jog to the left (X-) and to the front (Y-)</b> Press the  key to jog the spindle to the left and to the front simultaneously. The jog speed is determined by the jog speed bar setting.
	<b>Jog to the right (X+) and to the front (Y-)</b> Press the  key to jog the spindle to the right and to the front simultaneously. The jog speed is influenced by the hot key setting.

From:  
<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:  
[https://manuals.cyborg-engravers.com/doku.php?id=en:x300:jog\\_xy\\_keys&rev=1664136218](https://manuals.cyborg-engravers.com/doku.php?id=en:x300:jog_xy_keys&rev=1664136218)

Last update: **2022/09/25 22:03**

