

Jogging the spindle

	Jog to the left (X-) and to the back (Y+) Press the  key to jog the spindle to the rear. The jog speed is determined jog speed bar setting.
	Jog to the right (X+) and to the back (Y+) Press the  key to jog the spindle to the left. The jog speed is influenced by the jog speed bar setting.
	Jog to the left (X-) and to the front (Y-) Press the  key to jog the spindle to the right. The jog speed is determined by the jog speed bar setting.
	Jog to the right (X+) and to the front (Y-) Press the  key to jog the spindle to the front. The jog speed is influenced by the jog speed bar setting.

Use the jog speed bar to change the speed



. Click on the rabbit or on the turtle, or click on the dial.

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:

<https://manuals.cyborg-engravers.com/> - cyborg-engravers

Permanent link:

https://manuals.cyborg-engravers.com/doku.php?id=en:x300:jog_y_keys

Last update: 2023/05/17 10:05

