

Spindle rotates or does not rotate

Depending upon the kind of tool, a normal engraving cutter or a diamond drag cutter, the spindle motor has to rotate or not.

For normal engravings the spindle should always be rotating, but when diamond scratching in metals, the spindle motor should not rotate.



If this icon is shown on the virtual pendant, The spindle will rotate. It will automatically start and stop at the end of every engraving job.



If this icon is shown on the virtual pendant, the spindle will not rotate during the engraving job.

Clicking on the icon will alternate between the 2 possible choices.

Return to [the keypad overview](#).

Continue to [the table of contents](#).

From:

<https://manuals.cyborg-engravers.com/> - cyborg-engravers

Permanent link:

https://manuals.cyborg-engravers.com/doku.php?id=en:x300:rotation_on_off

Last update: 2023/05/17 10:05

