

Jog left / Jog right

The JOG ARROWS are used to Jog the location of the spindle

and to move through the Menu Items. Press the JOG SPEED key to change the jogging speed.

From:

<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:

https://manuals.cyborg-engravers.com/doku.php?id=es:x300:jog_x_keys

Last update: **2022/01/06 14:18**

