

# Move spindle up



Press and hold the Z-AXIS JOG ARROW  to raise the spindle.

Use the jog speed bar to change the speed . Click on the rabbit or on the turtle, or click on the dial.

**Return to [the keypad overview](#).**  
**Continue to [the table of contents](#).**

From:  
<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:  
[https://manuals.cyborg-engravers.com/doku.php?id=es:x300:raise\\_spindle\\_key](https://manuals.cyborg-engravers.com/doku.php?id=es:x300:raise_spindle_key)

Last update: **2022/09/25 11:29**

