

Shift (active)



Pressing the SHIFT  hot key before pressing any desired key will allow you to toggle between the Normal Shift Key and the Shifted Shift Key functions. When the SHIFT key has been pressed, the SHIFT ARROW will change colour to indicate you are in Shifted Mode.

Return to [the keypad overview](#).
Continue to [the table of contents](#).

From:

<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:

https://manuals.cyborg-engravers.com/doku.php?id=es:x300:shift_key

Last update: **2022/09/25 22:20**

