

# Spindle Test



The Spindle Test will test the controller output to the Spindle Motor. The spindle motor will stay active until the key is pressed again.


## Activating Spindle Test

Press the SPINDLE TEST  key.

Keypad Display “Activating Spindle ....”

Press SPINDLE TEST  again stops the Spindle Test.

### Note:

Pressing the CANCEL  key will also stop the spindle test.

**Return to [the keypad overview](#).**  
**Continue to [the table of contents](#).**

From:  
<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:  
[https://manuals.cyborg-engravers.com/doku.php?id=es:x300:spindle\\_test\\_key](https://manuals.cyborg-engravers.com/doku.php?id=es:x300:spindle_test_key)

Last update: **2022/09/27 22:34**

