

# System Requirements

## Hardware requirements

You can use any PC or laptop with a Windows operating system as a server for your Cyborg X-300. Your pc has to have the following components / features:

- a free and working Ethernet port.
- a two button mouse and a keyboard.
- a monitor with minimum HD resolution.
- Sufficient free harddisk space.
- a free USB port.

## The operating system

Any of the following windows platforms is supported:

- Windows 7 and 8 professional.
- Windows 10 professional.
- Windows 11 professional.

## The Switch

If the Cyborg X-300 has to be integrated in a LAN (local area network), you will need to put a second Ethernet port, dedicated to the X-300 in your pc.

**Continue to [Configuring the pc ethernet port.](#)**  
**Continue to [the table of contents.](#)**

From:  
<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:  
[https://manuals.cyborg-engravers.com/doku.php?id=es:x300:system\\_requirements](https://manuals.cyborg-engravers.com/doku.php?id=es:x300:system_requirements)

Last update: **2022/11/29 16:44**

