

Option de menu "Préférences"

The Preferences window

Variables and values that can be changed through the **Preferences** window:



- **Language:** Opens a drop-down menu showing all available languages. At this time, the following languages are available:
 - English
 - French (Français)
 - Dutch (Nederlands)
- **Units:**
 - Metric (mm)
 - Imperial (Inches)

The **Plate defaults:**

- **Width**
- **Height**, the standard Width and Height that will be shown as the **Plate Dimensions** in the **Autoplate** screen, as well as the standard dimensions when starting a **New Job**.
- **Baseline**
- **Text occuppies** (expressed in %): the standard percentage of the total plate surface which will be covered by the text lines.
- **Margin percent** (expressed in %): the standard percentage of the total plate surface which will be
- **Text height**
- **Margins**
- **Number of lines:** the standard number of lines when activating the **Autoplate** option.
- **Condensation** refers to the standard **Condense Mode** setting.

Access through

- Startup screen - Preferences
- File menu - "**Preferences**" option

From:
<https://manuals.cyborg-engravers.com/> - **cyborg-engravers**

Permanent link:
https://manuals.cyborg-engravers.com/doku.php?id=fr:symmetry:option_preferences&rev=1663157280

Last update: **2022/09/14 14:08**

