

# Resuming or Restarting the engraving job

## Resuming a paused engraving job

To start an engraving job, that job has to be loaded in the virtual pendent's memory. When that is the case, its name is visible in the virtual pendent's central status bar.



To start the job, click on the Start icon. After having clicked this icon the job starts and the Pause icon is being displayed in stead of the Start icon.



To pause the job anywhere, click on the Pause icon. After having clicked this icon the job pauses and the Resume icon is being displayed in stead of the Pause icon.



To resume the job, click the Resume icon. The job continues where it was paused and the Resume icon is replaced by the Pause icon again.

## Repeating a just engraved job

If you need to engrave the same job several times, you engrave it once, put a new plate on the table,



and you hit the Start icon twice.

you can repeat this as many times as you like, the machine will repeat the last engraved job everytime.

**Continue to [an overview of the virtual keypad](#).**

**Continue to [the table of contents](#).**

From:

<https://manuals.cyborg-engravers.com/> - cyborg-engravers

Permanent link:

[https://manuals.cyborg-engravers.com/doku.php?id=nl:x300:restarting\\_job\\_console&rev=1670158266](https://manuals.cyborg-engravers.com/doku.php?id=nl:x300:restarting_job_console&rev=1670158266)

Last update: 2022/12/04 13:51

