
Option de menu "Préférences"

La fenêtre Préférences

Les paramètres et valeurs qui peuvent être changés dans la fenêtre **Préférences**:

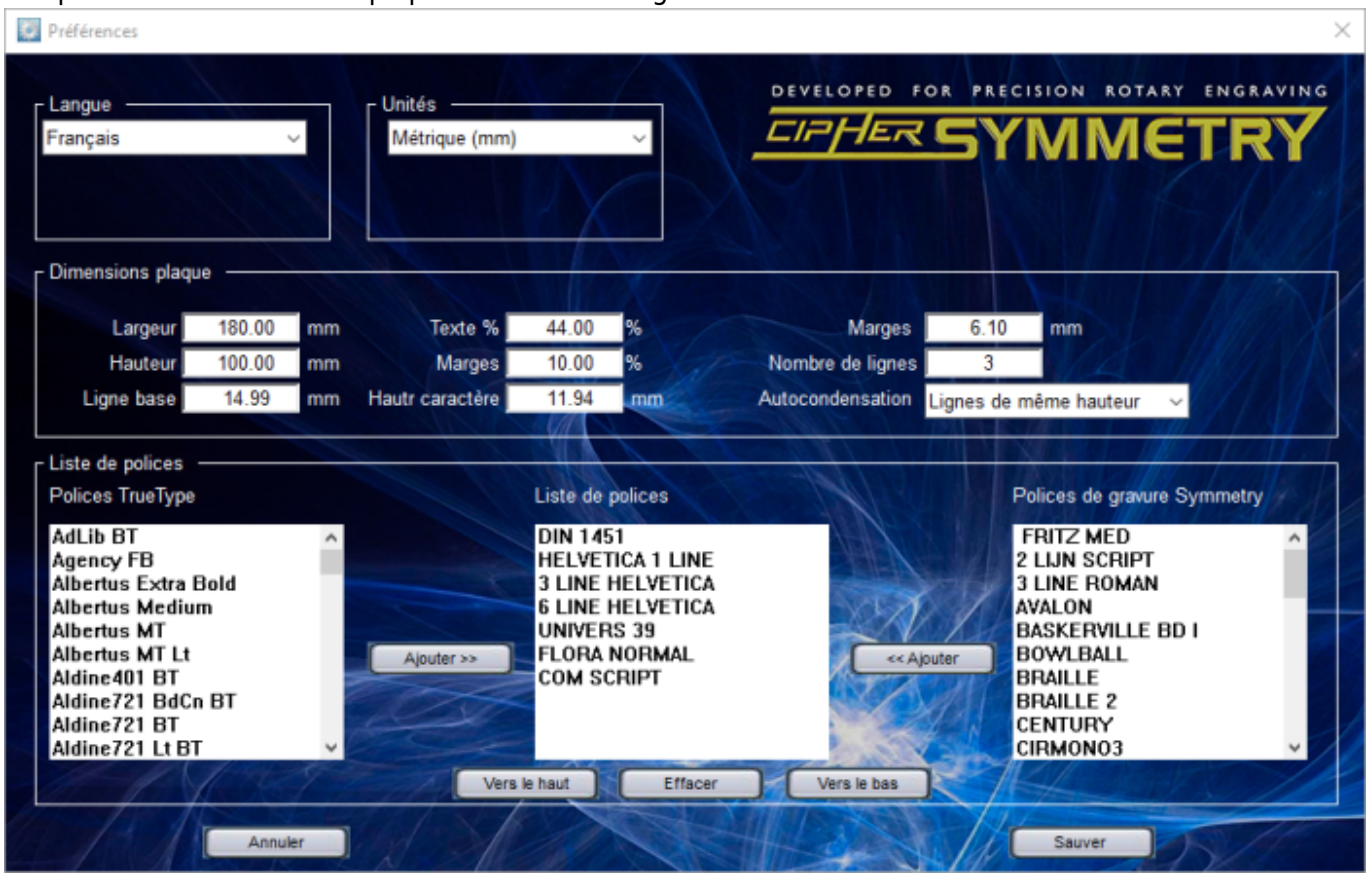

- **Langue**: Opens a drop-down menu showing all available languages. At this time, the following languages are available:
  - English
  - French (Français)
  - Dutch (Nederlands)
- **Units**:
  - Metric (mm)
  - Imperial (Inches)

The **Plate defaults**:

- **Width**
- **Height**, the standard Width and Height that will be shown as the **Plate Dimensions** in the **Autoplate** screen, as well as the standard dimensions when starting a **New Job**.
- Baseline

- **Text occupies** (expressed in %): the standard percentage of the total plate surface which will be covered by the text lines.
- **Margin percent** (expressed in %): the standard percentage of the total plate surface which will be

- Text height

- Margins
- **Number of lines**: the standard number of lines when activating the **Autoplate** option.
- **Condensation** refers to the standard **Condense Mode** setting.

Access through

- Startup screen - Preferences
- File menu - “**Preferences**” option

From:
https://manuals.cyborg-engravers.com/ - **cyborg-engravers**

Permanent link:
https://manuals.cyborg-engravers.com/doku.php?id=fr:symmetry:option_preferences&rev=1663158368

Last update: **2022/09/14 14:26**