
Option de menu "Préférences"

La fenêtre Préférences

Les paramètres et valeurs qui peuvent être changés dans la fenêtre **Préférences**:

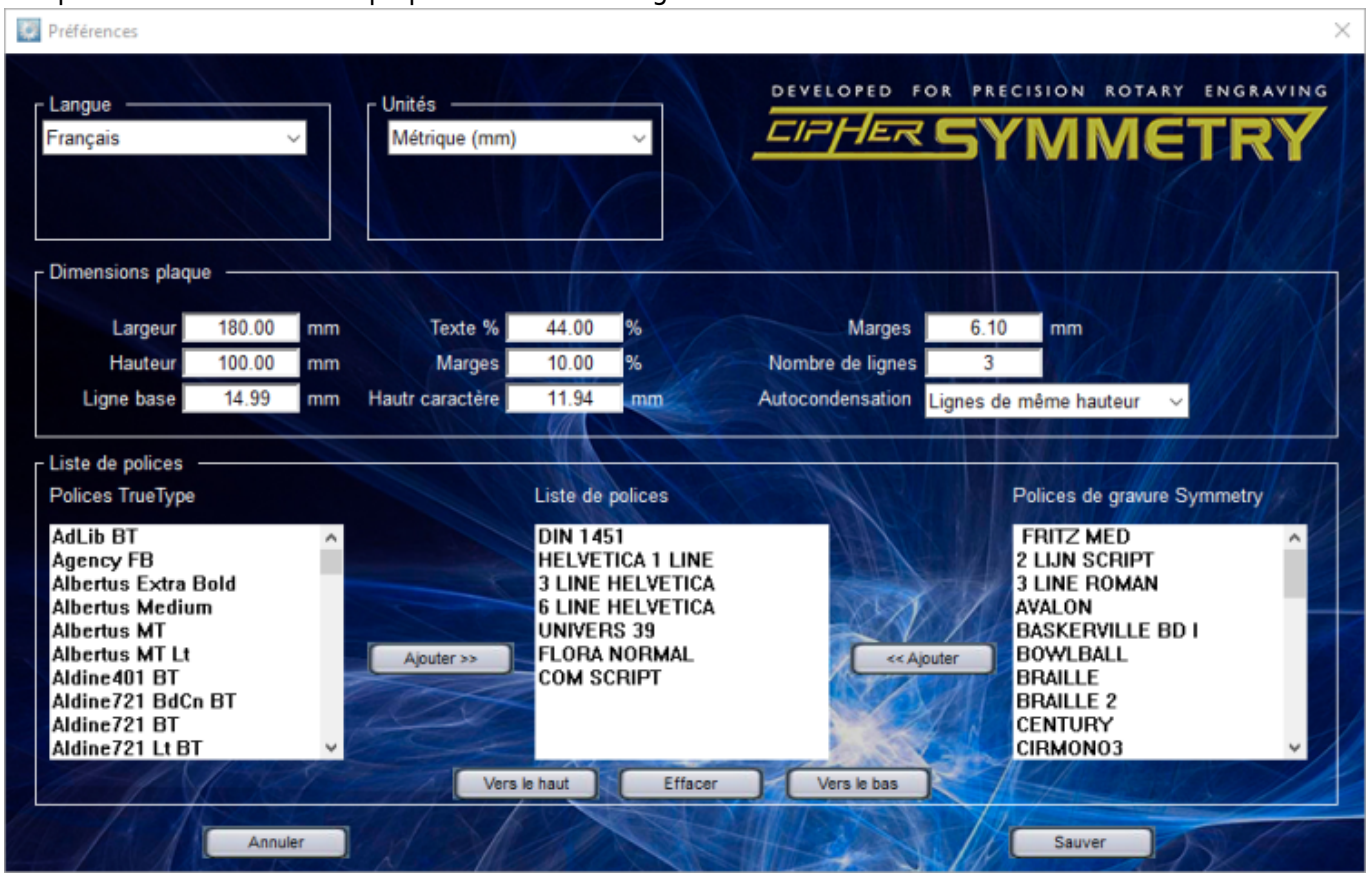

- **Langue**: ouvre un menu déroulant montrant toutes les langues disponibles. En ce moment, les langues suivantes sont à votre disposition:
  - Anglais (English)
  - Français
  - Néerlandais (Nederlands)
- **Unités**:
  - Métrique (mm)
  - Impérial (Pouces)

Les **Paramètres de plaque**:

- **Largeur** et
- **Hauteur**, les largeur et hauteur qui seront appliquées en standard comme étant les **Dimensions de plaque** dans l'écran **Autocadrage**, et en même temps les dimensions standard quand vous lancez un **Nouveau travail**.
- **Ligne de Base**

- **Occupation texte** (exprimé en %): the standard percentage of the total plate surface which will be covered by the text lines.
- **Marges** (exprimé en %): the standard percentage of the total plate surface which will be

- Text height

- Margins
- **Number of lines**: the standard number of lines when activating the **Autoplate** option.
- **Condensation** refers to the standard **Condense Mode** setting.

Access through

- Startup screen - Preferences
- File menu - “**Preferences**” option

From:
https://manuals.cyborg-engravers.com/ - **cyborg-engravers**

Permanent link:
https://manuals.cyborg-engravers.com/doku.php?id=fr:symmetry:option_preferences&rev=1663158953

Last update: **2022/09/14 14:35**