
Démarrage Rapide

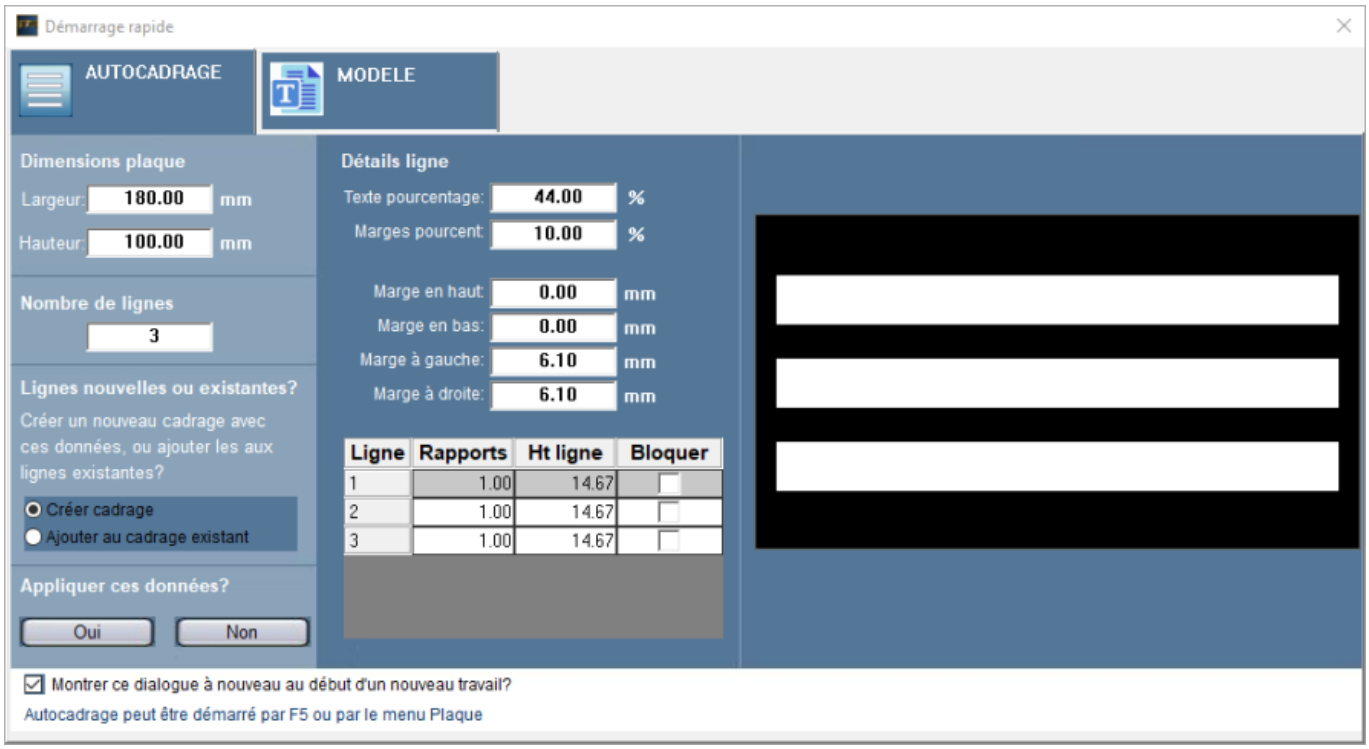


ge rapide" s'ouvrira en standard quand vous lancez Symmetry, ou quand vous sélectionnez l'option de menu "**Nouveau travail**". Cet écran vous permet de paramétrer votre travail, p.ex. configurer les dimensions de plaques et le nombre standard de lignes de texte sur la plaque. Vous pouvez également sélectionner l'onglet "Modèle" pour pouvoir sélectionner parmis différents modèles prédéfinis.

La fenêtre de démarrage contient deux onglets: **Autocadrage (1)** et **Modèle (2)** (voir l'image ci-dessous).

- l'onglet **Autocadrage** sera montré en premier.
- l'onglet **Modéle** est accessible uniquement à travers l'option **Démarrage rapide** en cliquant sur le titre de cet onglet.

When over time, you feel confident enough to create new jobs and layouts without using any of these two features and you prefer to start new jobs from a blank sheet, you can turn the **Quick Start Wizard** off by unchecking the checkbox at the bottom of the **Quick Start Wizard** screen.

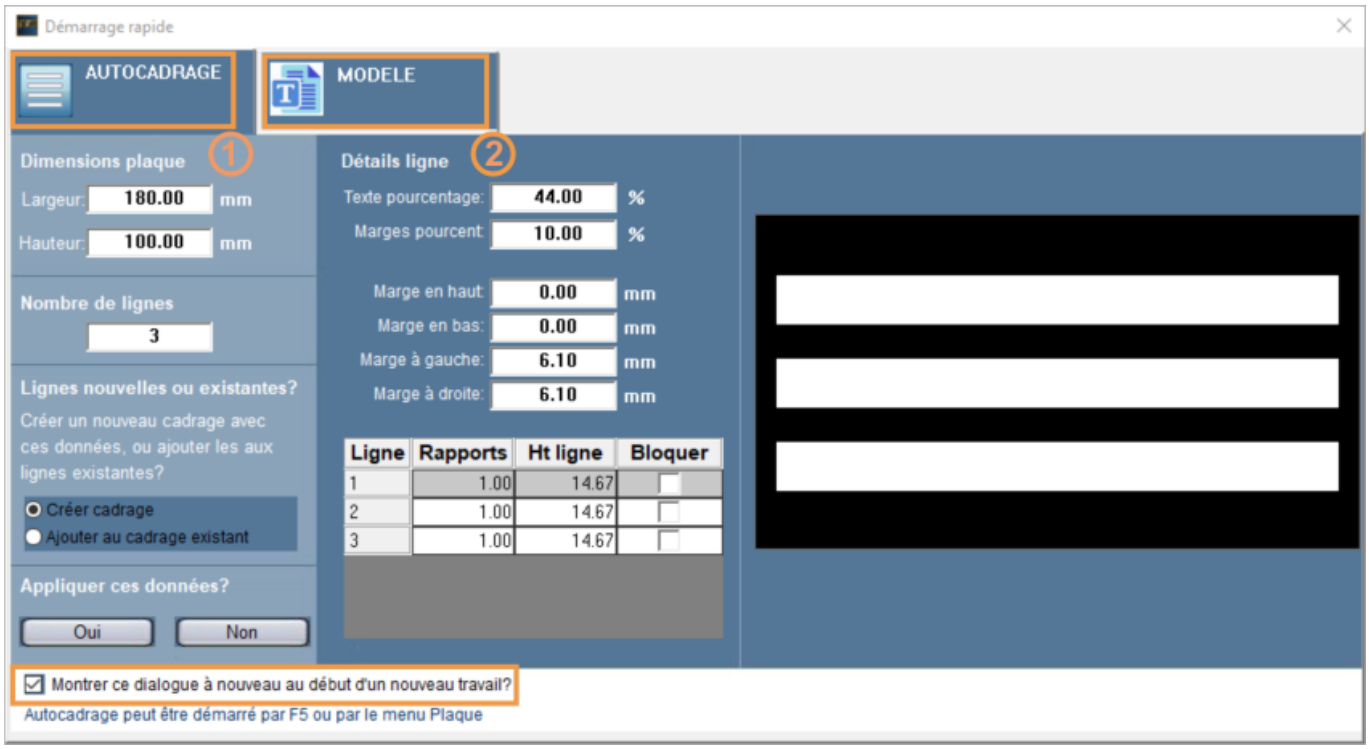

From:
https://manuals.cyborg-engravers.com/ - **cyborg-engravers**

Permanent link:
https://manuals.cyborg-engravers.com/doku.php?id=fr:symmetry:quick_start_wizard&rev=1662101068

Last update: **2022/09/02 08:44**