

Composants et fonctions

Vue de face

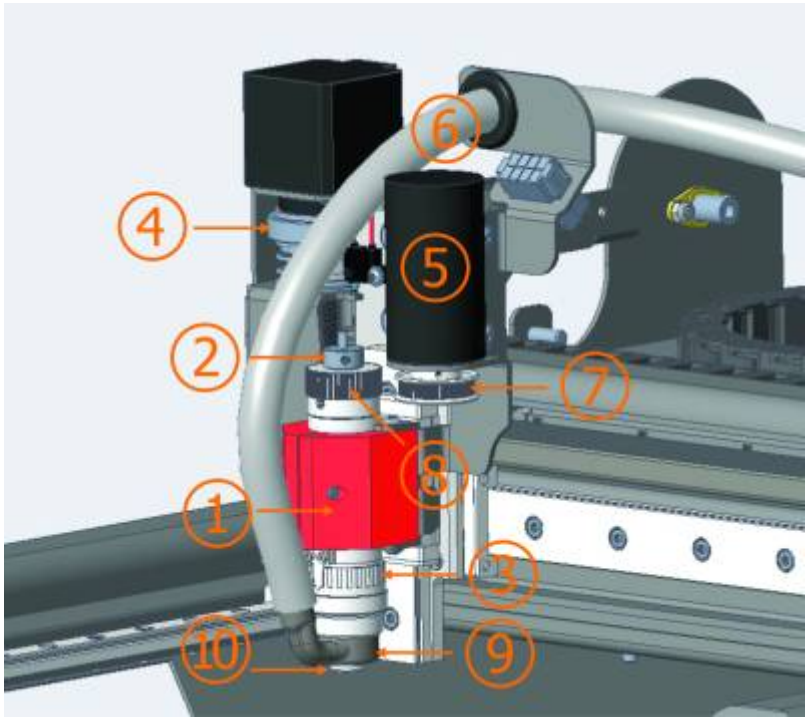


1	broche
2	bouton de serrage
3	Anneau réglage profondeur
4	Anneau réglage pression ressort
5	moteur broche
6	tuyau aspiration
7	poulie moteur
8	poulie broche
9	pied d’aspiration
10	nez limitation profondeur

Vue arrière

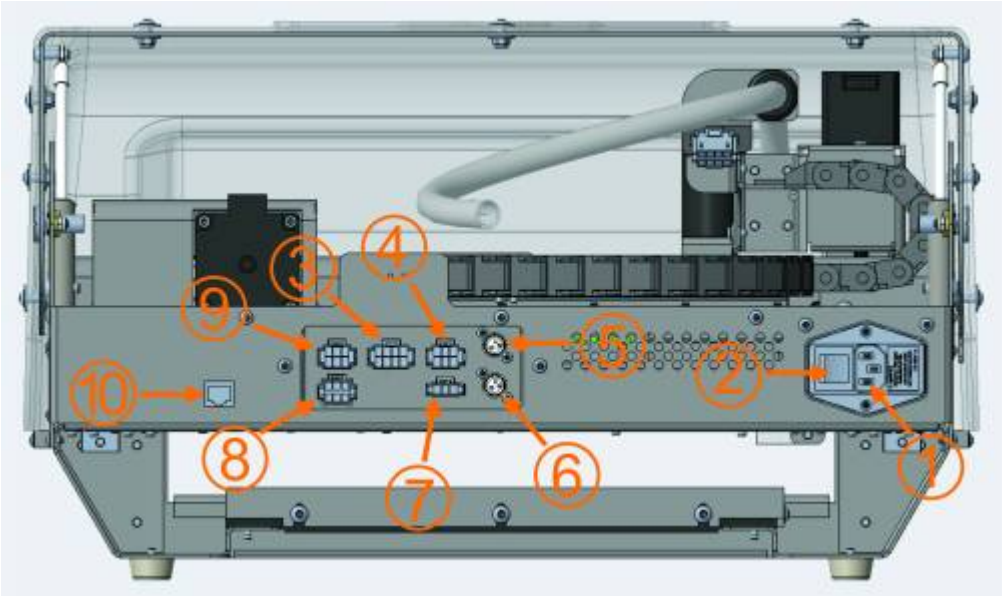

1	prise d’alimentation
2	Interrupteur Marche/Arrdêt (interrupteur principal)
3	prise pour commande de moteur de gravure
4	prise pour pilotage d’un 4ième axe (option)
5	prise pour pilotage d’un vaporisateur de liquide (aux 2)
6	prise pour pilotage d’un aspirateur (aux 1)
7	prise pour interrupteur de proximité de l’axe Z
8	prise pour le moteur de l’axe Y
9	prise pour le moteur de l’axe Z
10	connexion ethernet

Virtual pendent

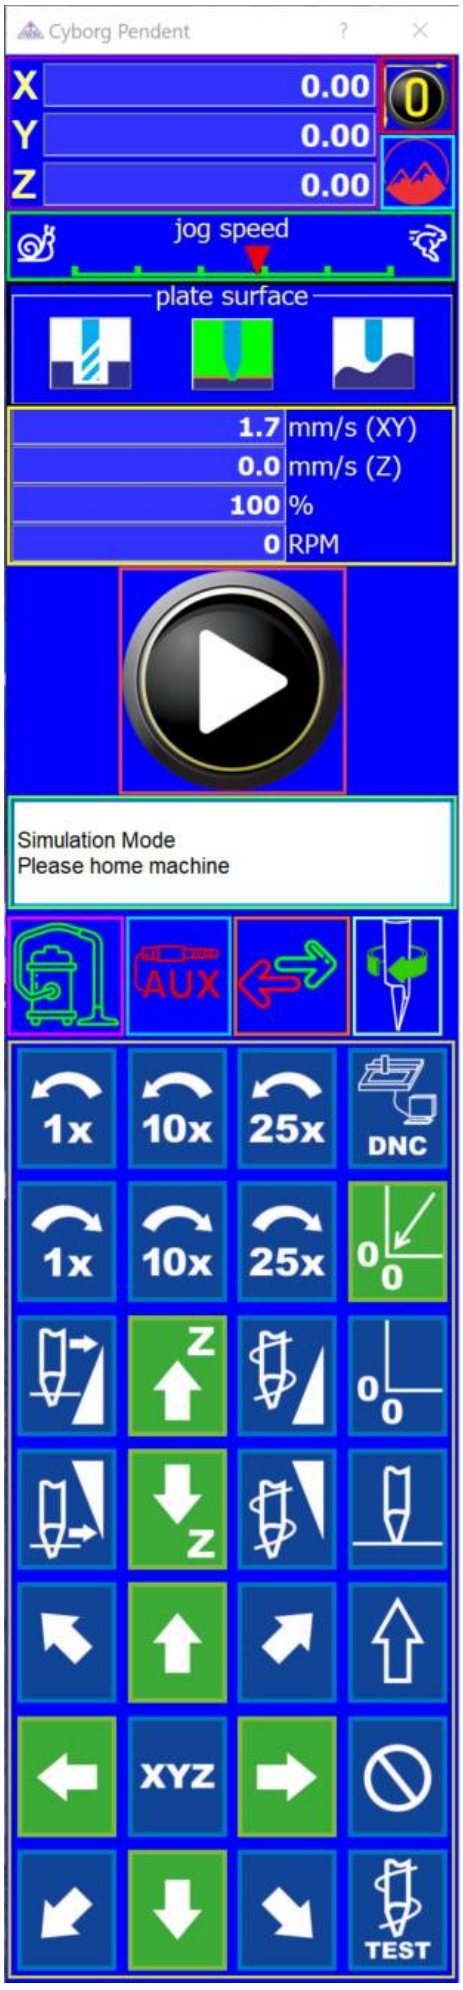

coordinates of the actual spindle position

actual home position

mapped surface active or not active

jog speed scale

plate surface mode

job speed information

start - pause - resume

status bar and comments field

vacuum cleaner on/off

auxiliary on/off

unidirectional or bidirectional engraving

rotary engraving or diamond scratching

motion control keys

Continue to X-300 installation environment.
Continue to the table of contents.

From:
https://manuals.cyborg-engravers.com/ - **cyborg-engravers**

Permanent link:
https://manuals.cyborg-engravers.com/doku.php?id=fr:x300:components&rev=1698348835

Last update: **2023/10/26 21:33**