

Composants et fonctions

Vue de face

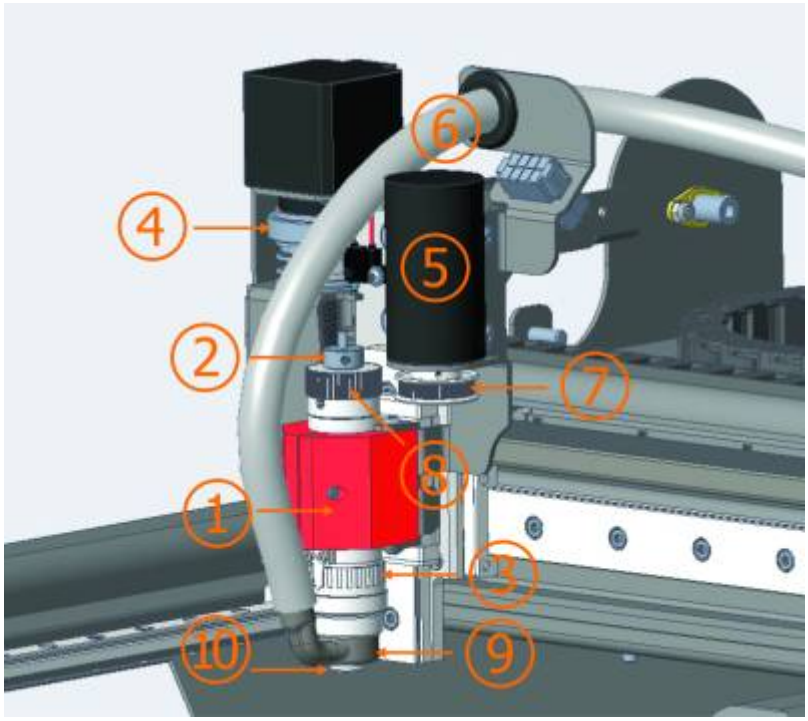


1	broche
2	bouton de serrage
3	Anneau réglage profondeur
4	Anneau réglage pression ressort
5	moteur broche
6	tuyau aspiration
7	poulie moteur
8	poulie broche
9	pied d’aspiration
10	nez limitation profondeur

Vue arrière

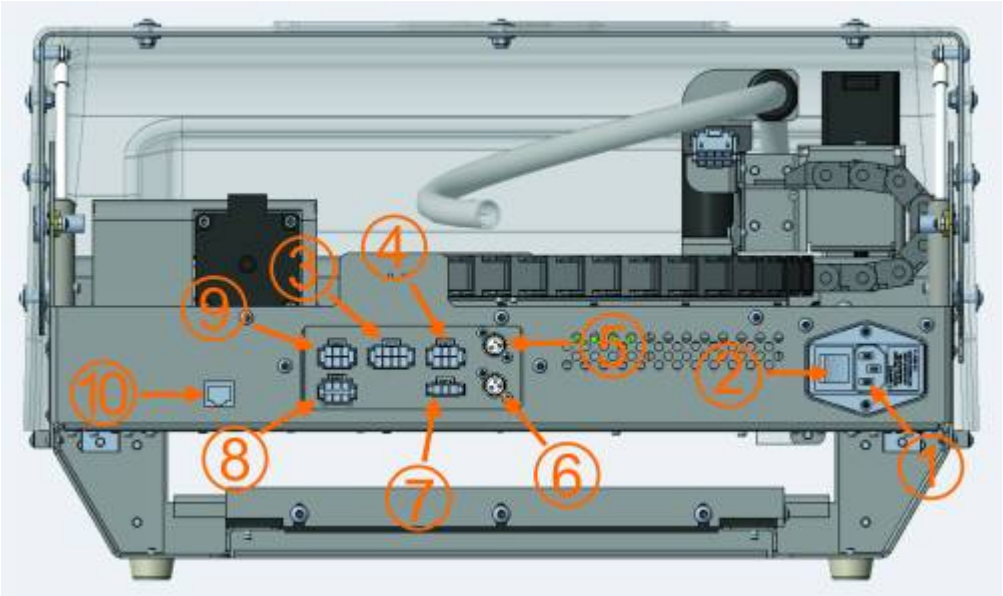

1	prise d’alimentation
2	Interrupteur Marche/Arrdêt (interrupteur principal)
3	prise pour commande de moteur de gravure
4	prise pour pilotage d’un 4ième axe (option)
5	prise pour pilotage d’un vaporisateur de liquide (aux 2)
6	prise pour pilotage d’un aspirateur (aux 1)
7	prise pour interrupteur de proximité de l’axe Z
8	prise pour le moteur de l’axe Y
9	prise pour le moteur de l’axe Z
10	connexion ethernet

Panneau de contrôle virtuel

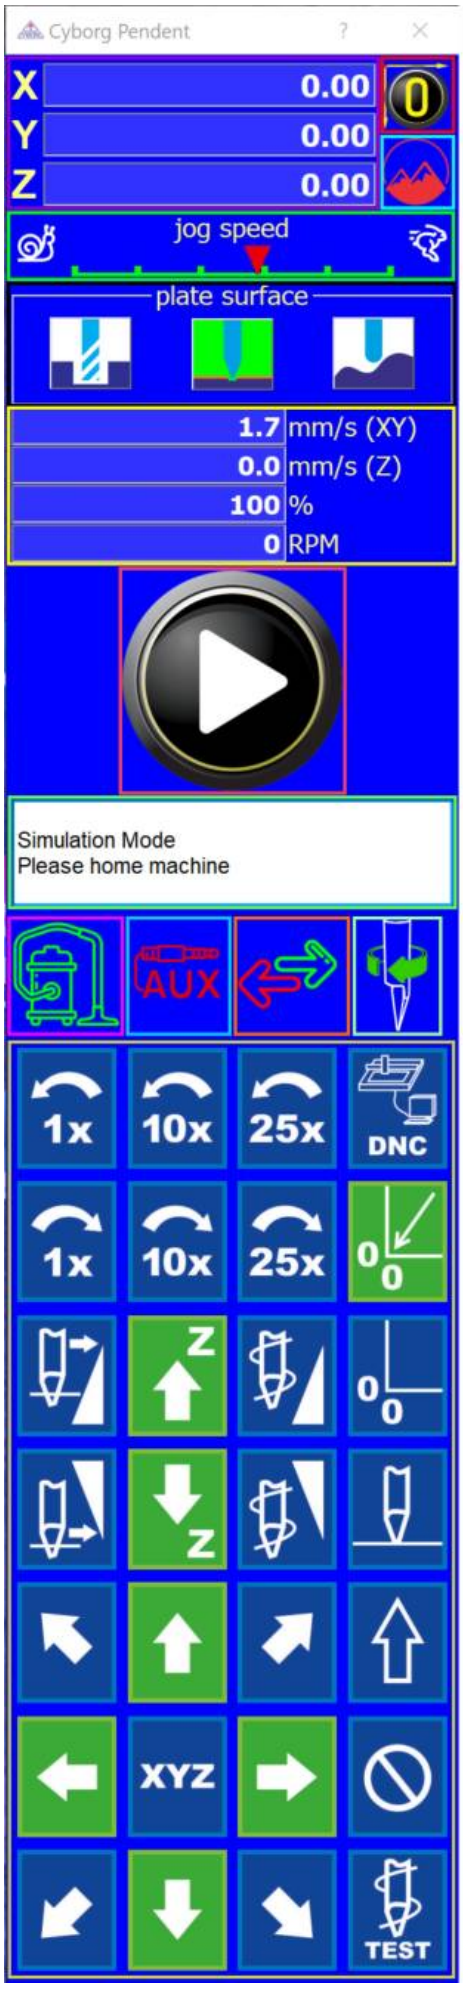

coordinates of the actual spindle position

actual home position

mapped surface active or not active

jog speed scale

plate surface mode

job speed information

start - pause - resume

status bar and comments field

vacuum cleaner on/off

auxiliary on/off

unidirectional or bidirectional engraving

rotary engraving or diamond scratching

motion control keys

Continuez à X-300 installation environnement.
Passez à table des matières.

From:
https://manuals.cyborg-engravers.com/ - **cyborg-engravers**

Permanent link:
https://manuals.cyborg-engravers.com/doku.php?id=fr:x300:components&rev=1698349753

Last update: **2023/10/26 21:49**