
Menukeuze "Autolayout" (F5)

De **Autolayout**-methode laat de gebruiker toe om snel een layout te creëren met meerdere tekstregels, die evenwichtig gespreid worden over het beschikbare plaatoppervlak. Gebruikers kunnen de linker- en rechtermarges wijzigen, maar evenzeer de tekstdekking aanpassen, en de ideale regelhoogte en regelspatiëring bepalen. Deze functie kan bijzonder nuttig zijn wanneer er een specifieke ruimte beschikbaar is waarbinnen uw ontwerp dient te passen.

Autolayout schermvoorbeeld

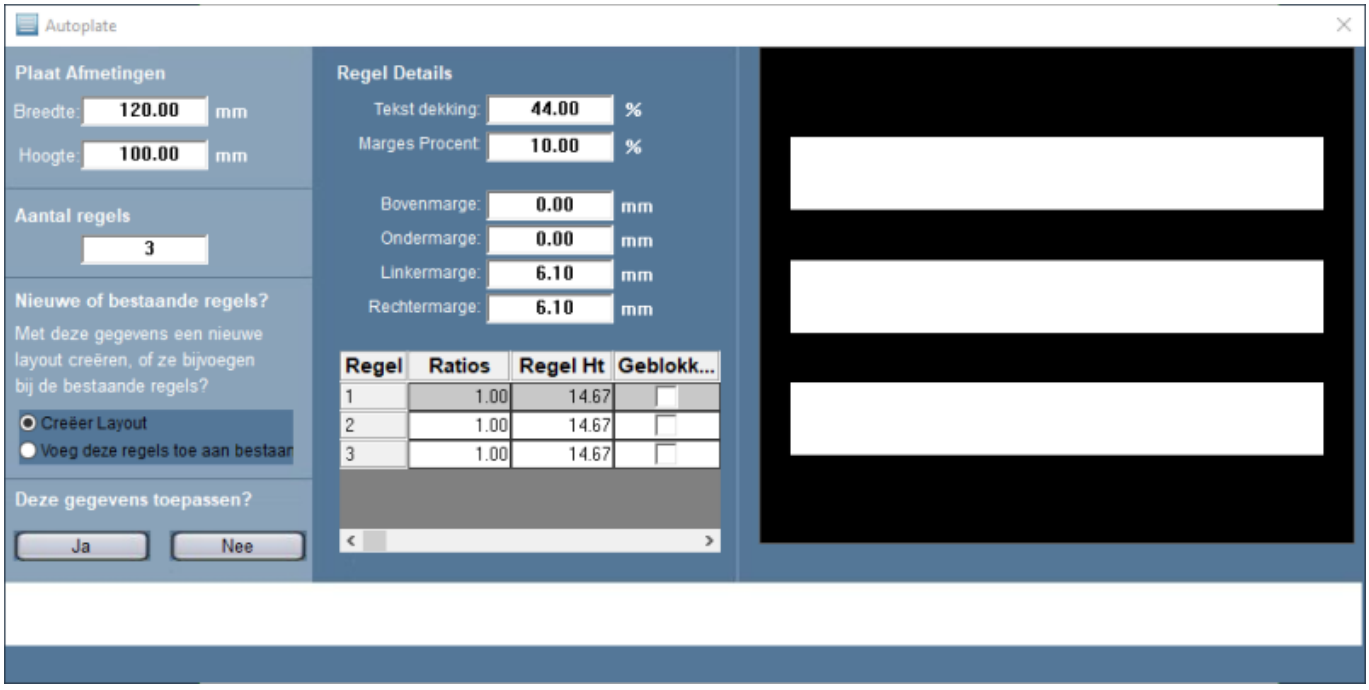

Plaat Afmetingen

- De **Breedte** (in ons voorbeeld: 120.00 mm) en de **hoogte** (100.00 mm) die hier worden voorgesteld, worden overgenomen uit de waarden die zijn ingesteld onder de **Voorkeuren**. Je kan die waarden in het **Autolayout**-scherm zelf instellen, maar wanneer je erg vaak een andere – en steeds weerkerende – plaatafmeting wil gebruiken, dan kan je die ook aanpassen onder dezelfde **Voorkeuren**.

Aantal regels

- Het aantal regels dat je wil creëren met je **Autolayout**-scherm.

Nieuwe of bestaande regels ?

Je beschikt over twee keuzemogelijkheden

- **Creëer layout**: In dat geval worden de gegevens in je **Autolayout**-scherm gebruikt om een volledig nieuwe layout te creëren. Wanneer je actieve scherm al een bestaande layout bevat, dan zal die verwijderd worden en verloren gaan.
- **Voeg deze regels toe aan bestaande**: In dat geval wordt de bestaande layout bewaard en worden de regels die je hier bepaalt, toegevoegd aan de bestaande layout.

Regel Details

- **Tekst dekking** (%):
  Het The percentage in height covered by sum of the hights of the text lines in comparison with the total plate height.
  For example, if your plate is 60 mm high, the "**Text Occupies**" value is 50%, the sum of the line hights will always remain 30 mm (50% of 60 mm). 3 lines of equal height will be 10 mm each.
- **Margin Percent** (%):
  The percentage of the left and right margins' widths in comparison with the plate width.
  A Margin percent of 10% on a sheet of 100 mm wide will result in a left and right margin of 10 mm each.

- **Top Margin**
- **Bottom Margin**
- **Left Margin**
- **Right Margin**

Line details table

- **Line**:
- **Ratios**
- **Line Ht**
- **Locked** (checkbox)

Access through...

- the **[F5]** function key on the keyboard
- the **Autoplate** shortcut  in the shortcut lists on the left
- the **Plate** menu and selecting **Autolayout**.

From:
https://manuals.cyborg-engravers.com/ - **cyborg-engravers**

Permanent link:
https://manuals.cyborg-engravers.com/doku.php?id=nl:symmetry:option_autoplate&rev=1651760656

Last update: **2022/05/05 16:24**