
Afstand tussen twee punten

 By clicking on this icon once, you can measure the distance between two points in your lay-out.

Click on the first point, then click on the second point. A small window will appear showing the distance between the two selected points. After using the ruler, the function will automatically be deactivated.

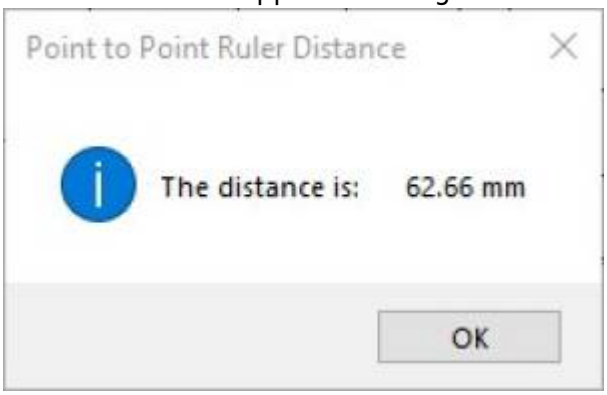

From:
https://manuals.cyborg-engravers.com/ - **cyborg-engravers**

Permanent link:
https://manuals.cyborg-engravers.com/doku.php?id=nl:symmetry:point_to_point_ruler&rev=1655298578

Last update: **2022/06/15 15:09**